


kreon

technics

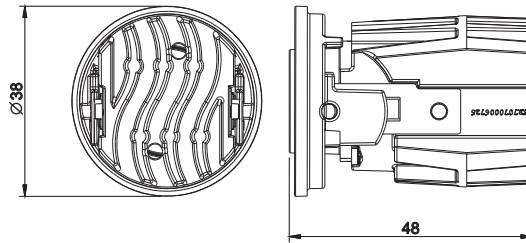

Name

Reference

Drive current

Module 40 LED

KR907733-xxxx-xxx

max. 1050mA




1 dimensions

The luminaire must not under any circumstances be covered with heat insulating covers or similar materials.
Cables must not touch the luminaire housing.
The connection cable must be routed so that it does not touch the lamp when the luminaire is tilted.

2 installation

To install the plasterkit.
See installation manual KR8170001755 or KR8170001758.

In case of replacing the lens open the glare snoot with a tool and follow steps in line 3 otherwise go to installation line 4.

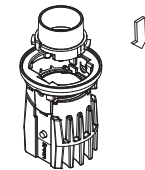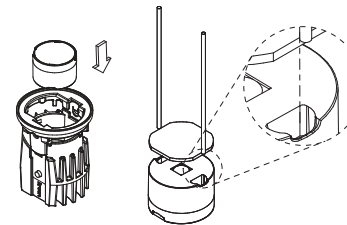

3 installation




Remove glare snoot.

Remove lens from glare snoot.

Add new filter to cooling part, align lens with led and align the led cables with the cutouts of the lens.

Add glare snoot to cooling part until it clicks.

Please make sure that main voltage is disconnected before proceeding!

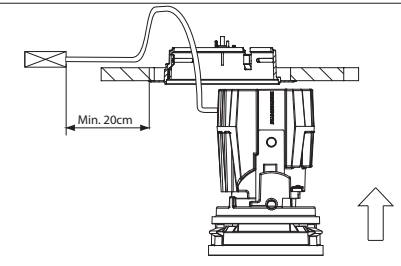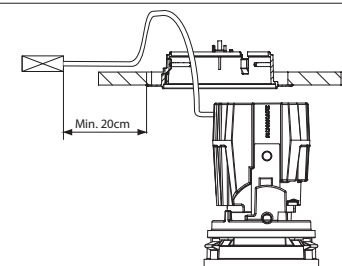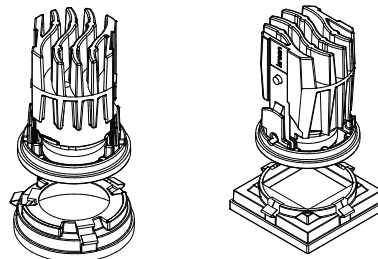



4 installation

Put the module on the louvre to install the module.

In case of transformer or ballast.

Put the assembly in the plasterkit until the louvre clicks, see also manual KR8170001761 or KR8170001762.



technics

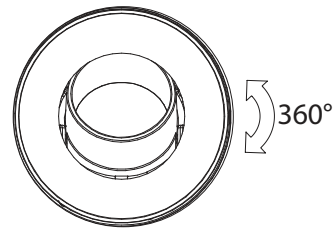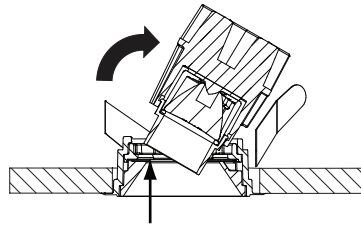

5 installation

Push at the filterholder to rotate inner part manually.

Turn inner part manually.

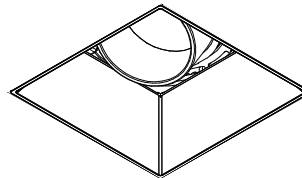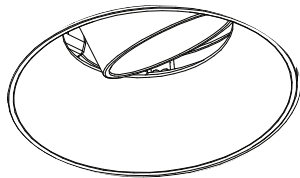

6 installation